


Flip the switch on the vacuum panel before starting engine.

Note: If not enough battery amperage to start the pump engine, then crank the truck and start the pump engine then kill the vehicle engine.



IMPORTANT


Open the tank valve before starting the engine or you will crack the bearings and seals in the pump (we've already overhauled the pump).

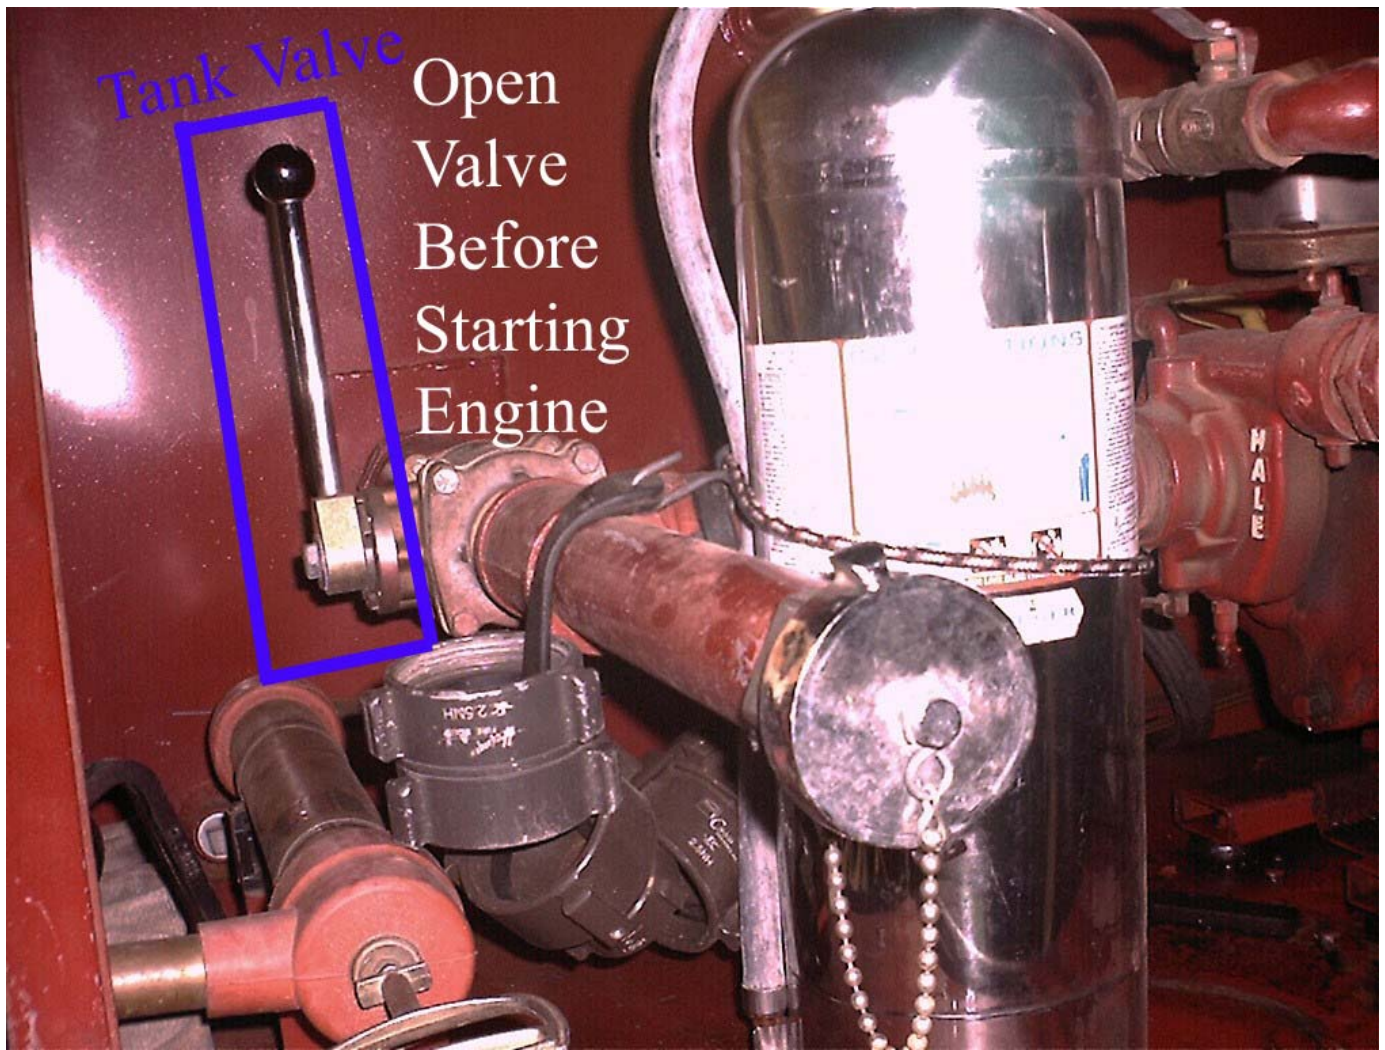

Open the reflow valve if you are not going to open a line and spray water.

Open the "Red Line" valve to spray from the booster reel (rubber) hose.

Open the 1-1/2" line valve to spray from the nylon hose.

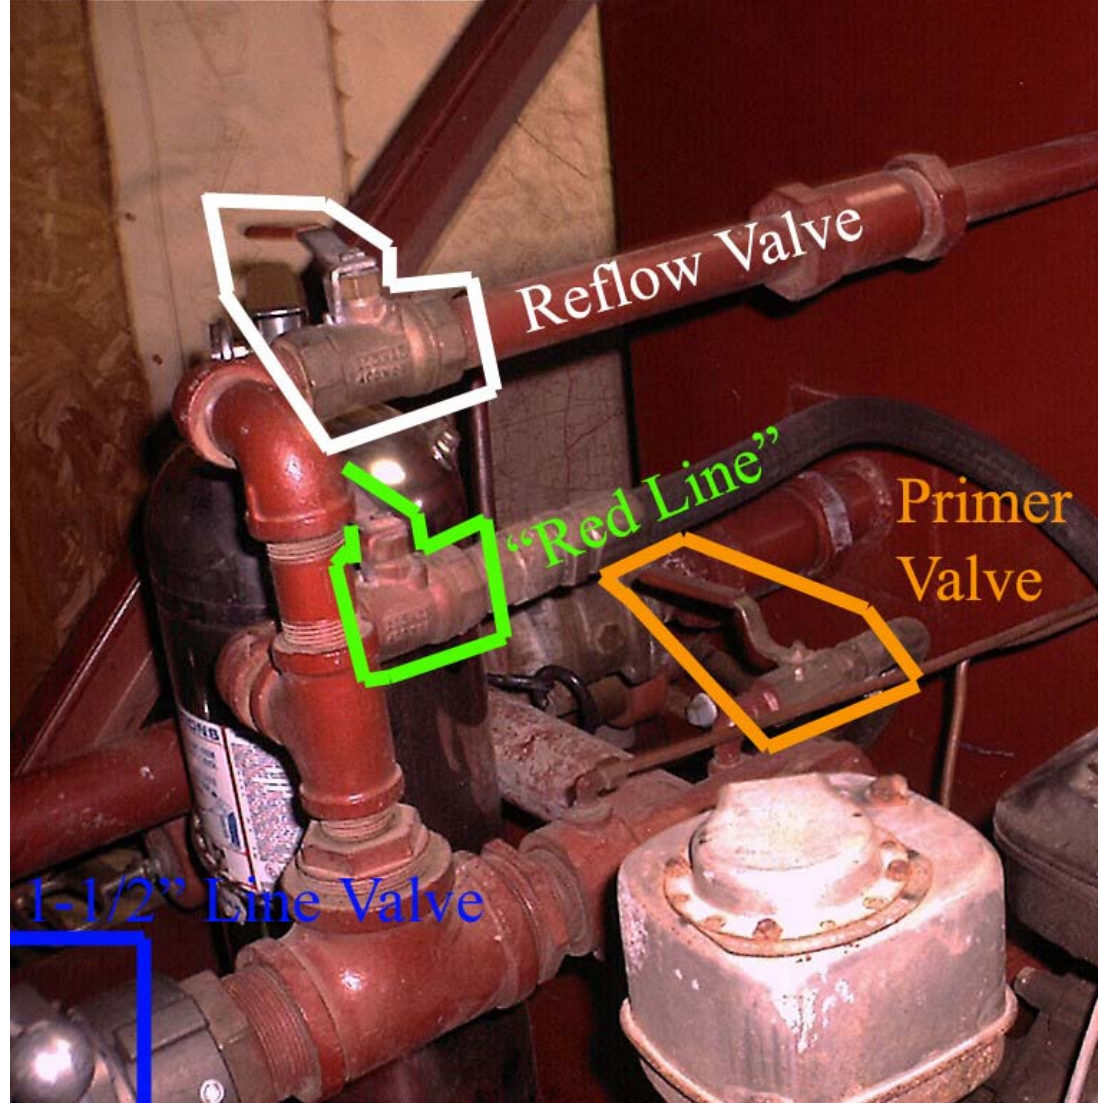

Use the throttle, choke, and start button to start the engine. If you aren't familiar with these items, you've never mowed your yard and also did not pay attention during training.

